


Proudly Made In USA

www.HylineOffroad.com

1507C West Park Avenue • Perkasie, PA 18944 Tel: 215/257-4323 • Fax: 215/257-4384 • 888-HYLINE 1 (888/495-4831)

Installation Instructions:

TJ/YJ Standard Winch Guard Part Number: TJ-YJ-10SWG Vehicle Fitment: Fits onto TJ-YJ-10SFB

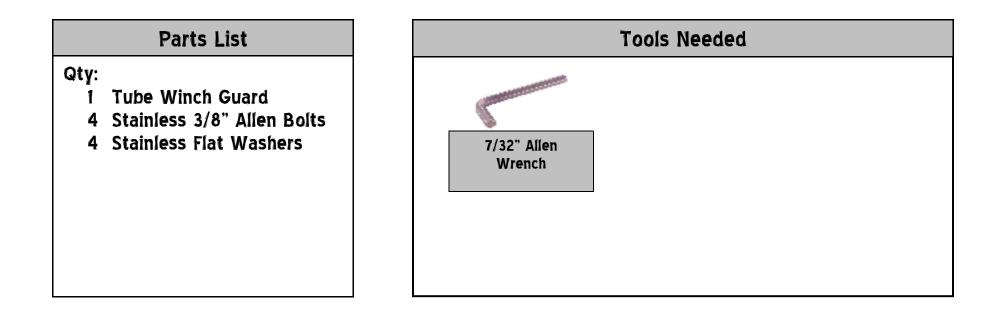

Congratulations on your purchase of the Hyline Offroad Winch Guard Tube. All of our products are completely manufactured in our facility located in Perkasie, PA. They are designed and engineered by Offroad enthusiasts just like you to be rock solid at an affordable price. Hyline Offroad would like to thank you for your recent purchase and look forward to serving you in the future.

Hyline Offroad Staff


PLEASE READ INSTRUCTIONS BEFORE BEGINNING INSTALLATION

*****BEFORE INSTALLING*****

Remove any lighting or wiring that will interfere with installation of Winch Guard Tube.

Winch Guard Tube

- Step 1 Remove plastic plugs if any are covering holes for 3/8" Allen Bolts.
- Step 2 Place Winch Guard Tube onto bumper and align the slots with the holes in bumper.
- Step 3 Install all four 3/8" allen bolts and flat washers, then tighten to 20 ft. lbs torque.
- Step 4 Assemble any lighting to light tabs per light manufactureres specifications. If desired, you may run wires down the sides of the Winch Guard Tube and secure with wire ties through clips. (See Figure)

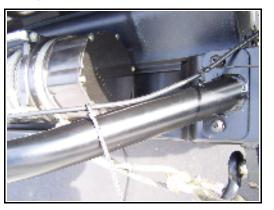

Send your OFFROAD pictures to pics@HylineOffroad.com . If we choose any one of your pictures to be used on our website, We send you a FREE Hyline Offroad T-Shirt.

Attention

Installation instructions provided must be read and followed exactly when installing product. Failure to do so could potentially result in injury or death of any occupants in the vehicle. WEAR SEAT BELTS AT ALL TIMES WHEN DRIVING!

Though our products are rugged, they are primarily designed and built to enhance the appearance of the vehicle and will not protect from death or injury in the event of an accident. Adhere to all vehicle manufacturers specifications